



1825 VIA BURTON
ANAHEIM CA 92806
714-772-5202 / FAX 714-772-2302
EMAIL: MAIL@MAJORMFG.COM
WEB: WWW.MAJORMFG.COM

**INSTRUCTIONS
FOR
HIT-66-240 TEMPLATE
FOR
FALCON MA SERIES
MORTISE LOCK**


**WHEN USING POWER TOOLS
ALWAYS WEAR
EYE AND EAR PROTECTION!!**

THINK SAFETY!!

**WHEN USING POWER TOOLS
ALWAYS WEAR
EYE PROTECTION!!**

Before attempting any installation know how to safely use the power tools involved. Be sure all bits and cutters are sharp and in good condition and all power tools and extension cords are in good working order and properly grounded. **AND MOST IMPORTANTLY, BE SURE TO WEAR, EYE AND EAR PROTECTION.**

Copyright 2010—Major Manufacturing

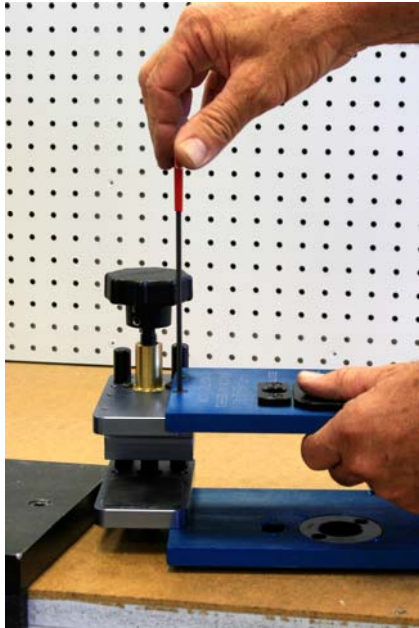

With both clamps opened equally, install both inside and outside templates to the HIT-66 clamp as shown. Do not tighten the 10-32 screws at this time. When all screws have been loosely installed, then it is ok to tighten.



Install the alignment guide to either side of the template set. This is used to align the template with the mortise pocket.




Shown is a standard mortise pocket, we will use this as a basis for the Falcon Mortise Lock install.



Install the mortise lock positioning plate. The plate will fit into the 1-1/4" x 8" faceplate cut out. There will be a 3/8" diameter pin centered on the plate. There is no top or bottom to worry about.



Slide the HIT-66 template with the alignment guide alignment pin and tighten to door. Alternate tightening between the top and bottom clamp. Do not attempt to tighten one clamp all the way at once.

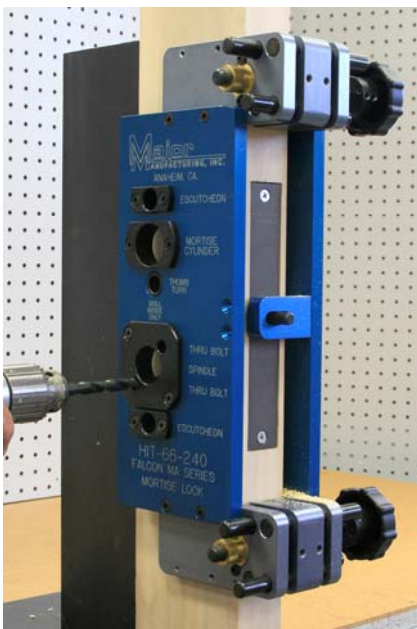

With a 3/8" twist drill, drill the thru bolt holes on both sides of the door. These holes go to the mortise cavity. Do not try to drill from one side through to the other.





Using a 1-1/8" hole saw, drill the hole for the lock spindle. It is drilled to the mortise cavity.



If your mortise lock installation required an inside thumb turn, use a 1/2" twist drill and drill the required hole on the inside of the door only.




Use a 1-1/4" hole saw to drill the mortise cylinder hole on the outside of the door. When all holes have been drilled, remove the HIT-66 drill guide from the door. This is a prep for a Falcon MA series mortise lock with rose trim. If installing escutcheon trim see next page.





If installing escutcheon trim, the holes can be drilled with a twist drill or hole saw. The factory template calls for a 19/32" hole. Our drill guide uses a template hole size of 5/8".

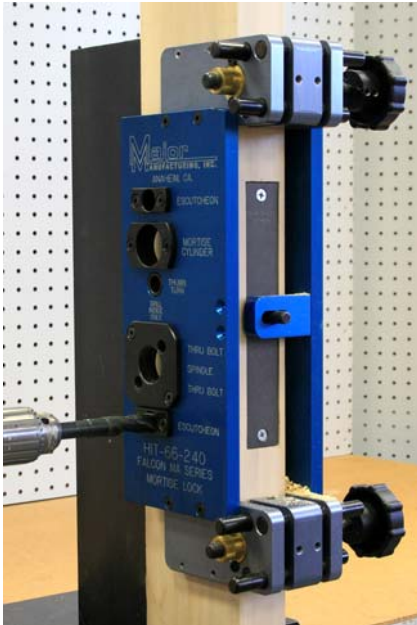

Drill the escutcheon holes half way from both sides of the door. When all holes have been completed, remove the HIT-66 drill guide from the door.



**Completed lock prep.
Install lock per manufacturers
directions.
That's all there is to it!**

Visit our web site at www.majormfg.com for more information on lock templates and a complete listing of all the tools we have available. While there, sign up for our newsletter and we will email new product information directly to you.