




714-772-5202 FAX 714-772-2302
web: www.majormfg.com

**INSTRUCTIONS FOR USE WITH
HIT-131 INSTALLATION TOOL
FOR KABA/ILCO 660, 760 & E2000 Series
Cylindrical Locks**

Remove allen bolt and back plate. Place HIT-131 drill guide on door with aligning washers in the 2 -1/8" crossbore. HIT-131 should be placed on door so the writing on the front plate is in the up right position. Replace back plate and tighten allen bolt until snug. Do not over tighten. HIT-131 is now ready to retrofit Kaba/Ilco 660/760 series locks . All through bolt holes may be drilled in one operation through the door, or half way from both sides. This unit was designed to retrofit locks with 2-3/4" backsets. For 2-3/8" backset locks move cap screws to inside of plate.

DRILLING INSTRUCTIONS

1. Drill the two top holes through door using a 1/2" bit These holes can be drilled through from one side of the door or half way from both sides of the door.
2. Drill the center hole with the same 1/2" bit only if the lock you are installing has a t-turn inside. This hole can be drilled through from one side of the door or half way from both sides of the door.
3. Drill the bottom hole to 1/2" . This hole can be drilled through from one side of the door or half way from both sides of the door.
4. Optional wire run, drill 3/4" hole thru door only if needed.

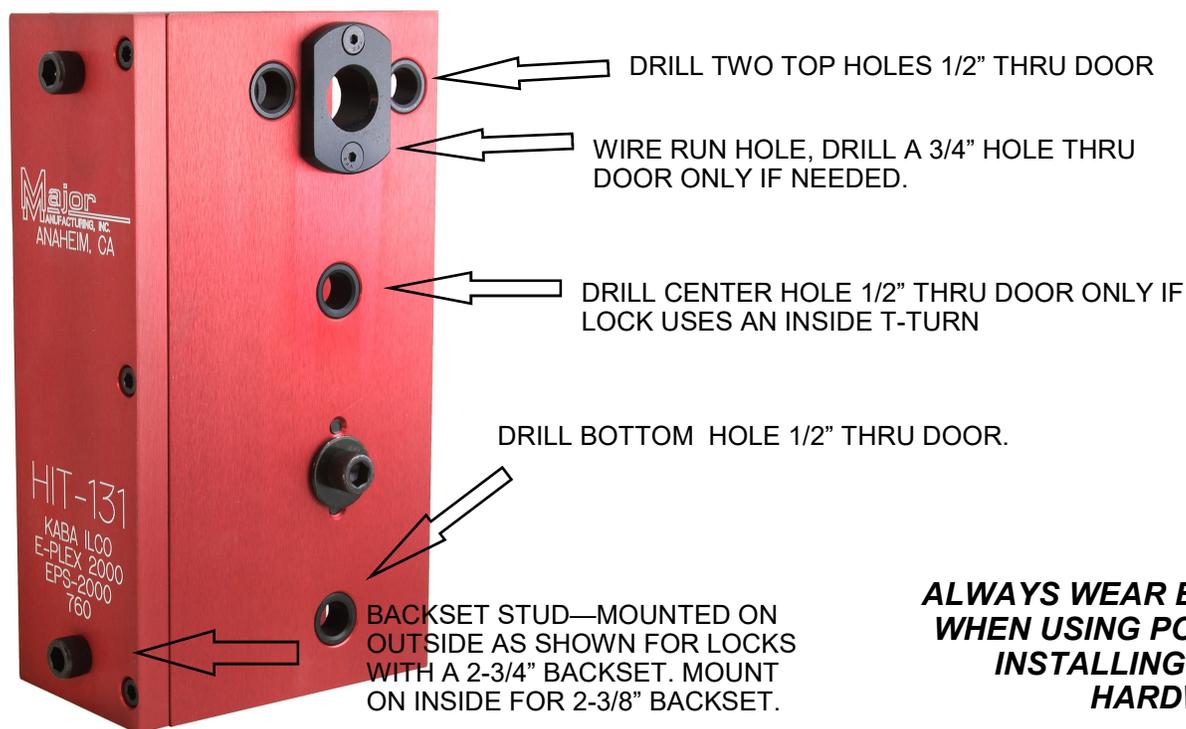

Changing from 2-3/4" to 2-3/8" backset.



This drill guide is now equipped with an adjustable backset. With the backset studs outside as shown, it is a 2-3/4" backset. With the studs moved to the inside of the plate, it will center on a 2-3/8" backset on a 1-3/4" door. Make sure studs are threaded in snug.

